

Backwashing

- 1) Turn off pump
- 2) Turn valve to "BACKWASH"
- 3) Turn on pump for 15 seconds
- 4) Turn off pump
- 5) Turn valve to "RINSE"
- 6) Open Ball Valve and turn on blower for 30 to 60 seconds
- 7) With blower still running, turn valve to "BACKWASH"
- 8) Leave blower on until dirty water no longer appears in the waste sight glass
- 9) Turn off blower and close ball valve
- 10) Turn on pump
- 11) Wait for the waste water in sight glass to become clear (approximately 60 seconds)
- 12) Turn off pump
- 13) Turn valve to "RINSE"
- 14) Turn pump on. Leave valve on "RINSE" briefly, until water in sight glass becomes clear again
- 15) Turn off pump and turn valve back to "FILTER"
- 16) Turn on pump and you are done



*Once a month before backwashing filter, turn off pump and open ball valve on the bottom of the filter. Leave valve open until water runs clear. Close valve and continue backwash as normal. (CAUTION: Leaving ball valve open too long will cause a loss of beads)