

## Backwashing

- 1) Turn off pump
- 2) Turn **Advantage Bead** Filter valve to “RECIRCULATE”
- 3) Turn **Advantage Glass** Filter valve to “RINSE”  
and (with your head turned away from the Glass filter) turn on blower for:  
30 seconds for the **Advantage 10 Glass Filter**  
60 seconds for the **Advantage 15 Glass Filter**
- 4) With blower running, turn **Advantage Glass Filter** valve to “BACKWASH” and open valve on top of filter.

*\*NOTE: If excessive water comes out of valve on top of the filter when opened, close valve and repeat step 3. In the future, increase the blower time on step 3 so that no water comes out during step 4*

- 5) After 60 seconds, turn off blower and close top valve
- 6) Turn on pump
- 7) Wait for waste water in site glass to become clear  
(Approximately 60 seconds)
- 8) Turn pump off
- 9) Turn **Advantage Glass Filter** valve to “RINSE”
- 10) Turn on pump. Leave on “RINSE” briefly, until water in site glass becomes clear again
- 11) Turn off pump
- 12) Turn **Advantage Glass Filter** valve to “FILTER”
- 13) Turn **Advantage Bead Filter** valve back to “FILTER”
- 14) Turn on pump